


Why Choose Control Temp Packaging?

0-25° C Case Study with ISTA 7D Summer Profile conducted in the R.N.C. Industries, Inc. onsite laboratory.

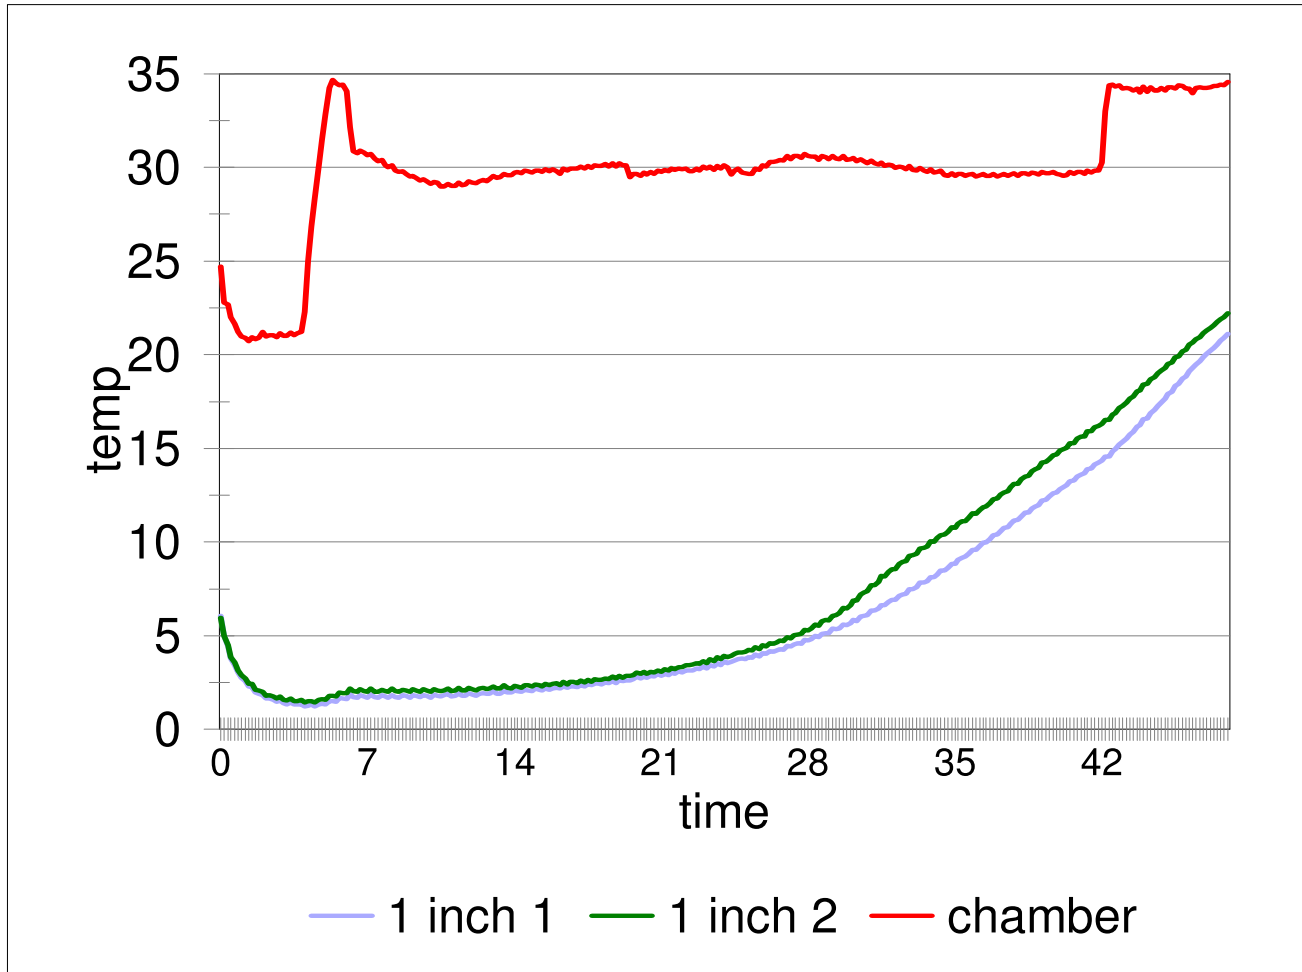

Box: 12" x 12" x 12" with 1" Classic Control Temp Test Duration: 48 hours
Product: 5 - .5ml syringes in 5 packs. Total 25 syringes in corrugated load box.
Coolant: 6 -16-ounce Gel Paks frozen at -20°C

Results: Maintained between 0°C and 25°C for duration of test.

Results based on a test conducted on August 16, 2016 to August 18, 2016

Get in Touch

rncind.com | 888-844-3864 | sales@rncind.com